 


TECHNICAL SUPPORT SERVICE

Setting up a simple job in Surelab


1. Choose the material size you wish to use. E.g. 50mm x 25mm.
2. Select the A letter and A again, this allows you to put text on your screen.



3. Type in the text that you want to appear on your label.
4. Once your happy, click on the select tool and press Ctrl and A, this selects all objects.
5. Select the tool output option and left click.



6. It opens up a preview screen to view the job you are sending. Click the output tool. Click ok in spooler options.

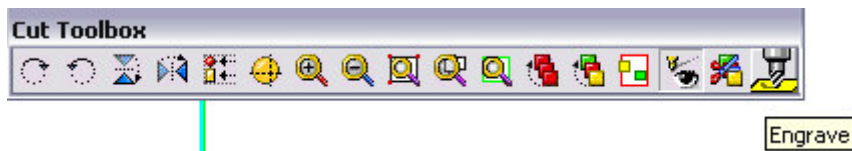

7. Ensure the machine is in 'Ready to Receive job' mode, or in the idle screen mode.
8. Your first job comes up on the handset, Press run to start or menu to set Z.
9. Press Menu, and choose Auto Low.
10. Run the Job

<mailto:service@suregrave.com>

www.suregrave.com/technical.htm